

INSTRUCTIONS FOR 9560 "REDHEAD" RING

This Speed Ring is designed to accept the standard manufacturers safety screen assembly or standard 168mm (6 5/8") single scrim.

CAUTION: A SCRIM OR SAFETY SCREEN MUST BE USED WITH THIS LIGHT FIXTURE/SPEED RING COMBINATION.


Mounting the Ring to the Redhead:

- 1 - Remove the accessory holder from the Redhead.
- 2 - Remove one screw from three of the mounting blocks on the Speed Ring. Set the blocks 90 degrees perpendicular to the ring as shown in Photo 1.
- 3 - Slide the Ring over the accessory holder and set the holder into the slot on the 4th block, also shown in Photo 1.
- 4 - Slide the 3 remaining blocks into position, install and tighten all thumbscrews. Photo 2.
- 5 - Reinstall the accessory holder on the Redhead.

If you do not have an accessory holder you must use a scrim in the slot on the Ring.

Parts List:

- | | | |
|-----|----------|---------------------------|
| 1 - | 29301000 | 7.3" metal Speed Ring |
| 4 - | 95602000 | Mounting Blocks |
| 8 - | 95605000 | 10-24 x 1.25" Thumbscrews |

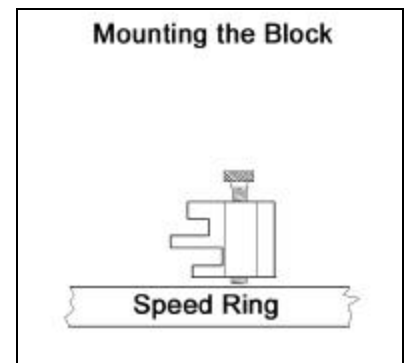

This Ring is designed to fit: Strand lanebeam 650/800/1000, Ianiro Varibeam 800/1000, DeSisti RC 80/100F, Cosmo RC 80/100F.